



# MIRACLE GLOSS™ M0811V3

Maximum Mold Release Wax and Microfiber Towel

## Choosing the best towel

for buffing M0811V3 Maximum Mold Release Wax

After extensive test we strongly recommend using a **Microfiber towel** after 10 minutes to buff off **M0811v3**. The common practice of using polyester wipe or cotton cloth will only move the wax around the mold rather than absorbing the wax. Here are some mold surfaces comparisons by using different towels.

### Perfect Test Results Using Microfiber Towel




M0811v3

Plus



Microfiber towel

=

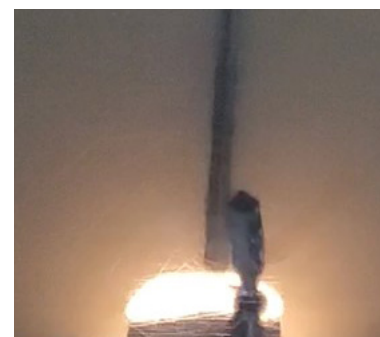

Perfect removal

Important Note: M0811V3's advanced solvent package makes it the world's first non-flammable paste wax for the composites industry and test results prove microfiber towels should be used for best wax removal.

### Unsatisfactory Test Results Using Polyester Wipe or Cotton Cloth



Unsatisfactory removal using polyester wipe



Unsatisfactory removal using cotton cloth



StonerMolding.com

1070 Robert Fulton Hwy. • Quarryville, PA 17566 • 1-800-227-5538 • 1-717-786-7355

